

This datasheet provides information for replacement spares for the X2 VDR/S-VDR system. The schedule shows product description, code or the spare and how often replacement is needed.

X2 VDR SYSTEM SPARES	CODE	OPERATIONAL LIFE
Main Electronic Unit (MEU) Fan	FAN-0005	Every 2 years
Float Free Capsule Hydrostatic Release Unit (HRU)	CAP-0005	Every 2 years
Fixed Capsule Acoustic Beacon Battery	BAT-0008	Every 3 years
Battery Backed Power Supply Batteries (2pcs)	BAT-0011	Every 4 years
Fixed Capsule Storage Drive	CAP-0010	Every 4 years
Float Free Capsule	CAP-0002	Every 5 years
MEU Motherboard BIOS Battery	BAT-0001	Every 5 years
^A Main Electronic Unit LTRM Storage Drive	STO-0008	Every 5 years
^A Main Electronic Unit OS Drive	STO-0012	Every 5 years
Fixed Capsule Acoustic Beacon	BEA-0001	Every 6 years
Fixed Capsule	CAP-0001	Every 10 years

^A **Recommended Spares for replacement;** as advised the system *Installation Manual*

There is a VDR Maintenance/Engineer Kit available that allows you to extend the X2 System operational life. This kit *does not* include any batteries.

X2 VDR MAINTENANCE/ENGINEER KIT	CODE	QTY
Main Electronic Unit (MEU) Fan	FAN-0005	1
X2 Main Electronic Unit Connector Kit	KIT-0031	1
X2 Outdoor Microphone	MIC-0005	2
X2 Indoor Microphone	MIC-0006	2

This information is confidential and is intended solely for the use by the recipient. Information should not be disclosed to 3rd parties in the form of copying or dissemination.